



H1 ANTI-INSECT SCREEN

1. MEASUREMENTS

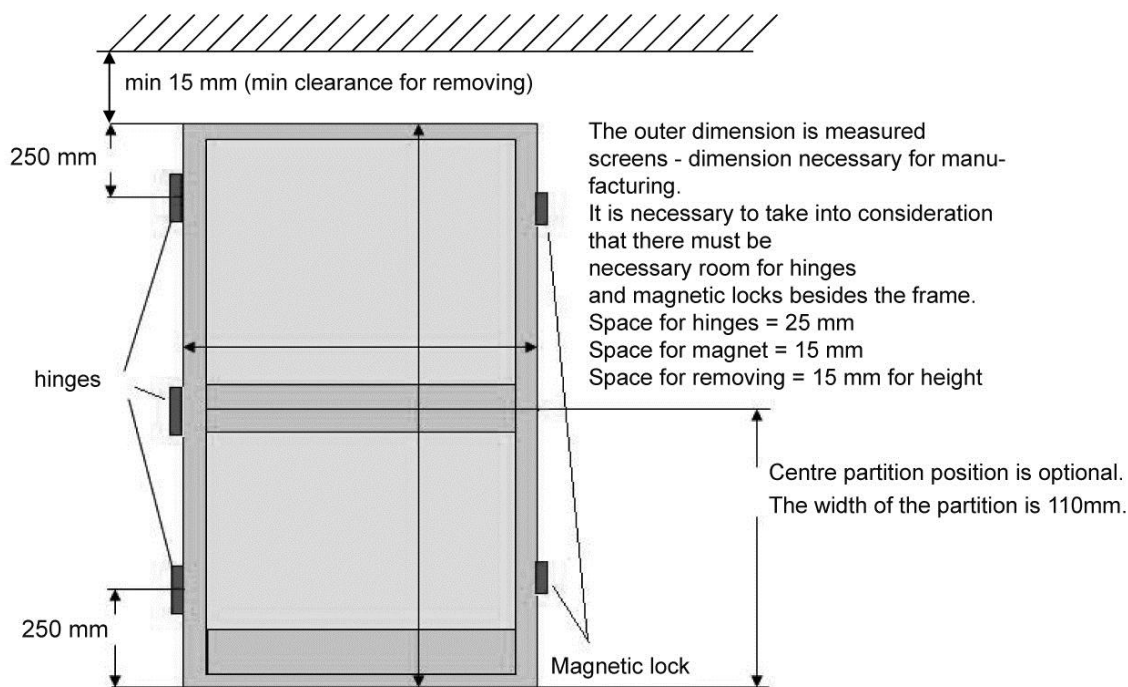

Door screens are produced in widths of 600 mm to 1,500 mm and up to a height of 2,400 mm.

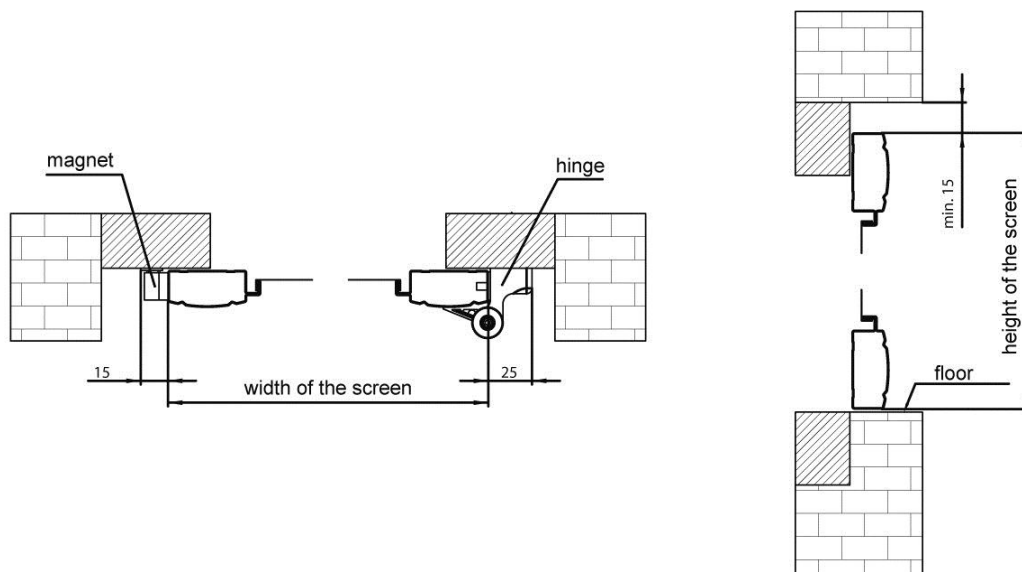

2. ASSEMBLY


Assembly is done by screwing on the screen hinges. Place the screen with the hinges on the frame, mark the place for bolts (holes for the hinge screws can be pre-drilled). Then screw.

PARTS IN THE STANDARD DOOR SCREEN PACKAGE:

- door hinges x 3, magnetic locks x2, handles x 1
- hinge screws 4 x 25, magnet screws 3 x 10, TEX magnet screw 3.5 x 13, cutting rivets for handles.


When the screw dimensions are greater than 2000 x 800mm, we can supply 3 hinges and 2 magnets. Hinges are pre-stressed during manufacturing. If we have a request for greater pre-stressing, it is necessary to press out the pin of the hinge, turn the hexagon with the 6mm Allen wrench 6 mm clockwise and press the upper part of the hinge back into the hexagon.

Fig 1

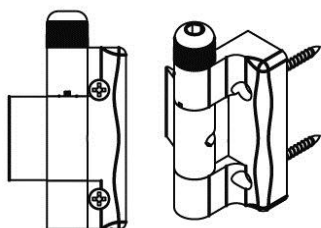


Hinges in the assembled status

Fig 2

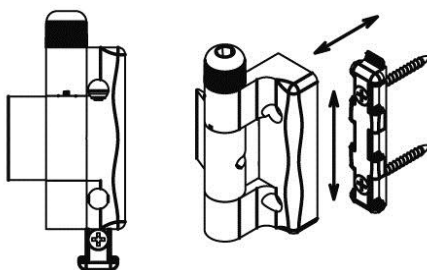

This door screen can also be dismantled (removed without needing to dismantle) with the hinges

Fig 3

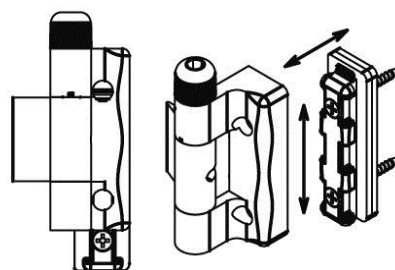

When using brushes for the door screen, it is necessary to use washers under the hinges. The number of washers is decided according to the size of the brushes.

TOOLS FOR ASSEMBLY

- metre ruler
- pencil
- screwdriver (accumulator)
- drill, diameter 2mm
- electric drill
- cutting pliers for rivets
- Allen wrench 6 mm